


OPTIMUS

Burny™

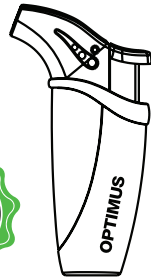

READ INSTRUCTIONS BEFORE USE
LIRE LE MODE D'EMPLOI AVANT UTILISATION
VOR GEBRAUCH ANLEITUNG LESEN
LEA LAS INSTRUCCIONES ANTES DE USAR

OPTIMUS | COOKING SINCE 1899™

ENGLISH

TECHNICAL DETAILS:

Dimensions: 75 mm x 45 mm / 2.9 x 1.7 in

Weight: 60 g / 2.1oz

Fuel: Butane (delivered without gas)



EN

FR

DE

ES

FILLING INSTRUCTION:

- Only refill your Optimus Burny in well ventilated areas and in safe distance to any open flame (8m / 25 feet).
- Turn lighter upside down so that filling valve is facing upwards and butane cartridge or gas canister is inverted above the lighter.
- Press butane cartridge nozzle into filling valve 2 - 4 times in short intervals of 3 seconds.
- Gas canisters according to EN417 can also be used for refilling; an adapter is needed for that (sold separately). Screw adapter onto the valve of the canister and press nozzle into filling valve 2 - 4 times in short intervals of 3 seconds, both lighter and canister facing upside down.

- Maximum filling level: approximately $\frac{3}{4}$ full (fill level viewable through window on side of Burny)
- Let fuel settle in lighter for about 3 minutes before using the lighter.

USE YOUR LIGHTER

- Ignite lighter away from face and clothing. Extreme heat is present above the visible flame.
- Push the ignition button slowly down.
- Use a small screwdriver to adjust the flamesize at the bottom of the lighter. Turn clockwise to decrease flamesize and counterclockwise to increase flamesize.
- Release ignition button to turn off the lighter and ensure that flame is out after use.
- We recommend to use your lighter in Minimum to Medium flamesize.
- If flame keeps on cutting out, reduce your flamesize, shake the lighter and relight it.
- Your Optimus Burny is windproof, but not stormproof.



WARNING

Burning hazard due to incorrect handling and storage.

EN

FR

DE

ES

- Do not ignite or use near an open flame, heater or any combustible material.
- Take extra care when using Optimus Burny to light a stove, as sudden ignition of gas can cause a flare up.
- Take extra care when operating this lighter, as the flame can be almost invisible in daylight or in strong light.
- Always ensure the lighter has cooled off after use before storing it.
- Keep in a dry place, out of direct sunlight. Do not store with any combustible material.
- Never expose to heat above 50°C (122° F).
- Never let children and mentally impaired people use this lighter.
- Do not attempt to repair or modify this lighter.
- Never puncture or put the lighter in fire.
- Do not use continuously for longer than 6 seconds.

For further enquiries please contact:

Katadyn Products Inc.
Pfäffikerstrasse 37
8310 Kempthal
Switzerland
+41 44 839 21 11
customerservice@katadyn.ch
www.optimusstoves.com

Katadyn North America Inc.
4830 Azelia Avenue North
Minneapolis, MN 55429
USA
1-800-755-6701
outdoor@katadyn.com

EN