


# OPTIMUS

Crux™

Canister mounted stove for outdoor use

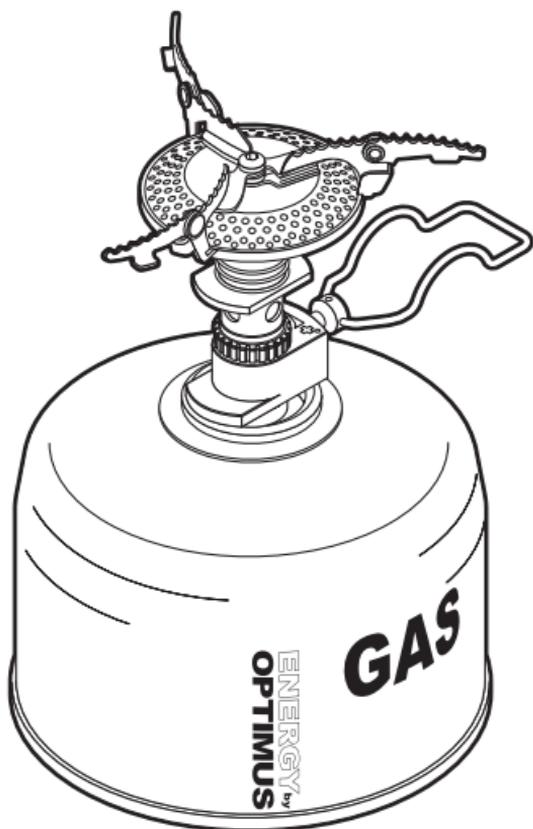

**OPTIMUS** | CLEVER COOKING SINCE 1899™

EN

FR

DE

NL

DK

SWE

NO

FI

IT

ES

PT

PL


CZ

RU

**FIGURE [1]**




**FIGURE [2]**

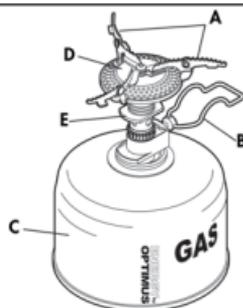


**FIGURE [3]**






**FIGURE [4]**

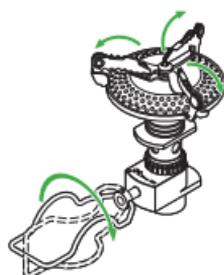

**FIGURE [5]**

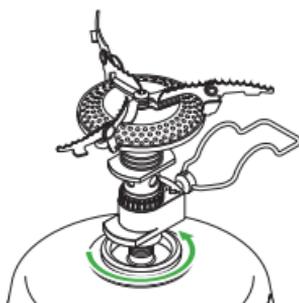

**FIGURE [6]**

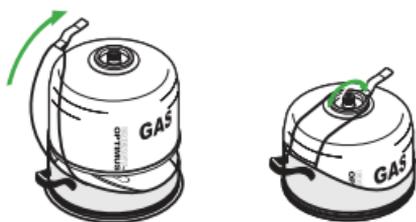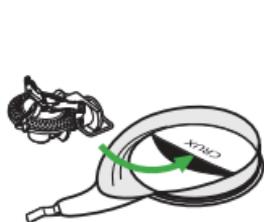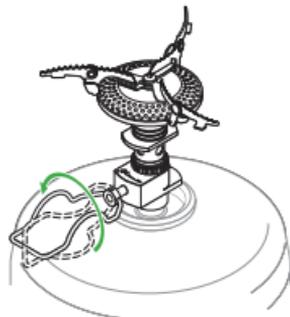

This stove is designed for outdoor sports enthusiasts for outdoor cooking and boiling of water only – never use it for any other purpose.

**IMPORTANT:** This manual uses the terms **DANGER**, **WARNING** and **CAUTION** to indicate possible safety hazards. Please read these messages carefully and follow the safety precautions. Please make sure you understand the contents of this manual before using the stove. Never let children and individuals with diminished mental capacity use this stove.



## **WARNING**

**Gas leakages are highly flammable**

**IF YOU SMELL GAS:**

- **Do not attempt to light stove**
- **Extinguish any open flame**
- **Disconnect stove from fuel supply**



## **WARNING**

**Do not store or use gasoline or other liquids with flammable vapors in the vicinity of this or any other appliance.**

 **DANGER**



## **CARBON MONOXIDE HAZARD**

**This appliance can produce carbon monoxide which has no odor.**

**Using it in an enclosed space can kill you.**

**Never use this appliance in an enclosed space such as a camper, tent, car or home.**

 **WARNING** CALIFORNIA PROPOSITION 65:

The fuel and byproducts of combustion of this fuel contain chemicals known to the state of California to cause cancer, birth defects, or other reproductive harm.



## WARNING

AUSTRALIAN GAS ASSOCIATION:

Use outdoors only, see operating instructions. Only use in well ventilated areas.

## SAFETY FIRST

---



## DANGER

**If the stove is used incorrectly, it could cause fire, explosion or carbon monoxide poisoning.**

Please keep these instructions in a safe place for future reference.

- If you have any questions, call Katadyn Products Inc. in Switzerland at +41 44 839 21 11, [customerservice@katadyn.ch](mailto:customerservice@katadyn.ch)
- US customers contact Katadyn North America at +1-800-755-6701, [outdoor@katadyn.com](mailto:outdoor@katadyn.com)



## DANGER

**This stove uses a liquid pressurized gas (LPG) canister that is highly flammable and explosive. Improper or unsafe use can result in accidental fire and explosions which can cause serious injury or possible death.**

- For outdoor use only
- The Optimus Crux is designed for Optimus gas canisters with a threaded valve certified to EN 417 (for Australia: 70% butane and 30% propane) (max. 450g). It may be hazardous to attempt to fit other types of gas canisters.
- Listen and smell for leaking gas. LPG is invisible and may be odorless, as its strong odorant can fade over time. As a result, leaks are not always detectable by smell.
- If you suspect that there is a leak, do not use the stove or canister. To locate and stop the leakage, move stove to a well-ventilated area outdoors away from any ignition source. Check that the stove and fuel canister connection is secure and tight.

## **WARNING**

**Risk of fire and explosion when using fire to detect gas leaks.**

- Only check for leaks using soapy water. Do not try to detect leaks using a flame.
- Check the seals before connecting a new fuel canister to the stove. Do not use the stove if seals are damaged or worn. **FIGURE [1]**

**If you expose the fuel canister to high heat, the canister could explode or leak.**

- Keep stove and fuel canister away from other heat sources.
- Follow all warnings on fuel canister regarding use and storage.
- Do not attach or remove canister near high heat, open flames, direct sunlight, other ignition sources or where temperature of canister exceeds 50°C (120°F).
- Only use fuel canisters which are intended to be used with this stove.

## INSTRUCTION FOR USE

---

Before using your Optimus Crux, read the entire manual. To minimize any risk of serious injury or possible death, follow the instructions and safety precautions in this manual. Only use the stove as described in this manual.

### **FIGURE [2]**

**A:** Pot Supports

**B:** Control Valve

**C:** Gas Canister

**D:** Burner Head

**E:** Burner head folding mechanism

### **TECHNICAL SPECIFICATIONS (STOVE ONLY):**

**Fuel:** Optimus gas canisters with a threaded valve certified to

EN 417 (for Australia: 70% butane and 30% propane) (max. 450g) **Weight:** 83g (2.9 oz) **Measurements:** 84 x 57 x 31mm / 3.3 x 2.2 x 1.2 in **Power:** 3000 W / 10200 BTU / 10.8 MJ/h **Burn time:** up to 90 minutes at maximum output (230 g gas canister) **Boil time:** As little as 3 minutes depending on climate, altitude, etc. **Injector size of stove:** 0.32 mm **EN 521:2006 Category:** direct pressure – butane / propane mix



CE-048BN – 0045



## 1 SET UP STOVE

---

1. Fold out burner head until it springs into locked position. **FIGURE [3]**
2. Fold out the control valve handle and make sure that the valve is fully closed. **FIGURE [4]**
3. Fold out pot supports. **FIGURE [4]**
4. Check O-ring for damage before connecting it to gas canister.

## 2 CONNECT STOVE TO GAS CANISTER

---

1. Hold onto the stove and screw the correct gas canister counterclockwise tightly. **FIGURE [5]** Tighten by hand only and be careful not to damage the threads when you connect the gas canister.
2. Always keep the gas canister in an upright position while connecting it to the stove.
3. Ensure that the stove is screwed all the way to the bottom of the thread.
4. Make sure the stove is in a stable position so it will not tip over.
5. Allow plenty of free space around the stove, at least 1.25 meters (4 feet) on each side and 1.5 meters (4.5 feet) above it.

6. Keep stove area clear and free from combustible materials, gasoline and other flammable vapors and liquids.

## **WARNING**

### **Risk of burning or serious injuries due to gas leakage hazard.**

- This appliance should only be used in an above ground open air situation with natural ventilation without stagnant areas, where gas leakages and products of combustions are rapidly dispersed by wind and natural convection.
- Never light the stove if you detect a hissing sound or the smell of gas after tightening the canister. The gas has an additive with a foul smell. Never use a stove that smells of gas.
- Do not use stove if damaged or if it does not operate properly.
- Never overtighten gas canister when connected to the stove. Overtightening can damage stove or canister causing gas to leak.
- Use extreme caution when using stove in temperatures below freezing. In freezing temperatures, O-rings can stiffen and leak gas.
- Always check for gas leaks before and after lighting the stove.
- Keep children more than 3 meters (10 feet) away from stove and fuel.
- Keep highly flammable fabrics away from stove, such as outdoor clothing, sleeping bags, tents, etc.
- Never leave a burning or hot stove unattended.
- When a canister change is necessary, please follow steps 1-4 of this manual carefully.

## **3 USE THE STOVE TO COOK**

---

1. Open the control valve approximately one turn counter-clockwise and light the burner. **FIGURE [6]** Check that the flame ring is complete and that the flame is mostly blue and non-pulsating in normal operation.

2. Adjust the control valve to get the flame you want.
3. If the output is weak, it could mean that the gas is running out, or that the canister is too cold. Turn off the stove and let it cool down. Make sure there is no open flame nearby when changing the gas canister.
4. Accessible parts may become very hot. Keep out of reach of children, people with diminished mental capacity and pets.

## **WARNING**

### **Overheating and explosion hazards**

- Never add a windscreen after the stove is lit.
- Never use a windscreen which fully encloses the gas canister.
- Keep solid combustibles at least 1.25 meters (4 feet) away from the top and 1 meter (3 feet) from sides of a burning stove or a stove that you are in the process of lighting.
- Keep flammable liquids and vapors at least 8 meters (25 feet) away from the top and sides of a burning stove or a stove that you are in the process of lighting.
- Never attempt to light a stove if control valve has been left open. If control valve is left open, close it immediately and thoroughly ventilate area before lighting stove. Failure to ventilate area can result in an explosion.
- Never use cookware with a diameter larger than 220 mm (8.5 in). The pan plus food must not weigh more than 2 kg (4.4 lbs) combined.
- Never place and operate two or more stoves together.
- Never operate stove with empty or dry cookware.
- Never use non-Optimus heat reflectors or windscreens.

## **4 TURN OFF, COOL AND PACK STOVE**

---

1. Turn off the stove by turning the control valve handle fully clockwise and double-check that the flame is completely extinguished.

2. Allow stove to cool properly.
3. Disconnect the gas canister.
4. It is normal for a small amount of gas to fizz out when you unscrew the gas canister.
5. Fold in pot supports and the head of the burner by pushing down the metal ring between the fuel control valve and the burner head. Place stove in stuff sack.

## CAUTION

### **Risk of burning due to incorrect handling and storage.**

Storing gas canisters near any heat or ignition source, or where temperatures exceed 50° C (120° F) can result in the canister exploding.

Never move a burning or hot stove. Allow stove to cool for at least 10 minutes before moving it.

Never transport or store the stove with the gas canister connected to it.

Always store gas canisters in a well-ventilated area away from any possible heat or ignition source such as: water heaters, stoves, pilot lights, furnaces or where temperatures exceed 50°C (120°F).

## **5** MAINTENANCE

---

Before each use, check the O-ring where the stove connects to the gas canister. **FIGURE [1]** Leakage may result if the O-ring is not in place, or if it is worn or damaged. Replace the O-ring by teasing it out with a tool such as the blunt end of a sewing needle. Never use a sharp or pointed object that can damage the seal surfaces. Fit the new O-ring with care to avoid damaging it. Only use original Optimus O-rings (Art. Nr. 8017867) for this purpose. Do not modify the stove. Only qualified individuals are allowed to do additional service. For major repairs send stove back to Optimus.

If you have any questions about these instructions, your stove, replacement parts, or repairs, please contact:

**Katadyn Products Inc.**

**Pfäffikerstrasse 37**

**8310 Kempththal**

**Switzerland**

**+41 44 839 21 11**

**customerservice@katadyn.ch**

**www.optimusstoves.com**

**Katadyn North America Inc.**

**4830 Azelia Avenue North**

**Minneapolis, MN 55429**

**USA**

**+1-800-755-6701**

**outdoor@katadyn.com**

**LIMITED WARRANTY**

Optimus provides a 2-year limited warranty against manufacturing defects for the original stove purchaser. Proof of purchase is required for this warranty to be valid. This warranty does not cover damage due to accident, improper use or modifications.

If you have any problems with your Optimus Crux, return it to your dealer or contact Katadyn. Clean food and dirt from the stove before returning it. For more information, contact your dealer or Katadyn Products Inc. in Switzerland at +41 44 839 21 11 or e-mail us at customerservice@katadyn.ch. US customers please contact Katadyn North America at +1-800-755-6701 or outdoor@katadyn.com.

This warranty gives you specific legal rights and you may have other legal rights which vary from state to state.

**SUPPLEMENT INSTRUCTIONS TO OPTIMUS CRUX**

**Important: Read these instructions for use carefully.**

**Familiarise yourself with the appliance before connecting it to its gas container. Keep these instructions for future reference.**

Always ensure that the appliance is placed on a firm horizontal surface before using it. Always ensure a clearance of at least 1 meter to each side and 1.5 meters overhead of appliance before using it.

Injector size of appliance: 0.32 mm  
Australian Gas association certified. Certificate number AGA  
7459 G.

EN

### **Outdoor Agencies Warranty for Australia**

If this Outdoor Agencies supplied product is in any way defective, other than resulting from abnormal use, for a period of two (2) years after purchase, please return it to your place of purchase with its proof of purchase. Alternatively you may contact Outdoor Agencies Pty Ltd, PO Box 620, Regents Park or call 02 8717 7300 or email [sales@outdooragencies.com.au](mailto:sales@outdooragencies.com.au), regarding this warranty and, after contact, return the product at your cost. If Outdoor Agencies determines the product is under warranty we will repair or replace it. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits under this warranty are in addition to other rights and remedies you may have at law.

Distributor of Optimus in Australia:  
Outdoor Agencies PTY LTD  
Unit N2, 391 Park Rd, Regents Park NSW 2143  
Australia

Please visit our website for additional information about our other products: [www.optimusstoves.com](http://www.optimusstoves.com)

**For clean water please visit [www.katadyn.com](http://www.katadyn.com)**